






## **Warning**

- Please read the product instructions carefully before installation. Keep this installation instruction manual for future reference.
- Please save this installation manual for future reference. Installation of stationary products and connection of cables shall comply with local national electrical codes.
- For safety reasons, the product must be grounded to prevent damage from electrical leaKage.
- All installation procedures must be performed by qualified electrician personnel.
- Ensure that all ceiling hooks are firmly connected and can withstand the weight of the lamp. Failure to properly install the product may result in damage or injury which the manufacturer assumes no responsibility
- The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed. The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

## **Product Wiring Diagram**

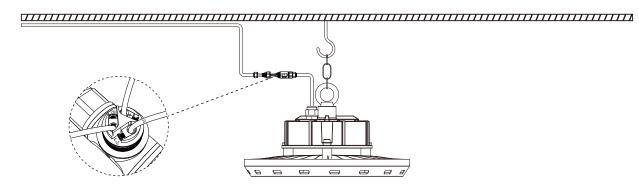

## **Product Specifications and Dimensions**

| Model No:     | NR-HB0001-50-65K-BK-90D |
|---------------|-------------------------|
| Input:        | AC220-240V 50/60Hz      |
| Power:        | 50W                     |
| Lumen Output: | 5500lm                  |
| CCT:          | 6500K                   |
| IP rated:     | IP65                    |
| Beam Angle:   | 90°                     |
| Ra:           | ≥80                     |

